

WEEKENDER HITCH MOUNT INSTRUCTIONS

Step 1: Begin by flipping your Weekender upside down and placing eight rubber bonded washers on top of the center mounting holes. Please make sure you are utilizing the center of your tank and the rubber side is facing the tank.



Step 2: Place the mount on top of the rubber bonded washers. Make sure the tank's spout is facing the inside of the bumper. Add eight 5/16" washers, eight 5/16" lock washers and eight 5/16"-5/8" bolts (must go in this order, four per side, eight total).



Step 3: Slide the Weekender Hitch Mount into your 2" receiver and slide in the hitch pin with the cotter pin clip. Please make sure the valve on the Weekender is on the passenger side for best protection from the elements.



Step 4: Attach your hitch stabilizer by sliding the U-bolt over the Weekender hitch bar.



Step 5: Slide on the metal plate with the bend facing the front of your vehicle. Please make sure the bent portion is over the lip of your vehicle's hitch adapter. Once this is in place add the washer, lock washer and nut. Tighten the nut with a wrench until the bolt is securely fastened and there is no movement of your tank.



WaterPORT

Copyright © 2022 WaterPORT. All Rights Reserved.

www.theWaterPORT.com

WEEKENDER HITCH MOUNT INSTRUCTIONS

Step 1: Begin by flipping your Weekender upside down and placing eight rubber bonded washers on top of the center mounting holes. Please make sure you are utilizing the center of your tank and the rubber side is facing the tank.




Step 2: Place the mount on top of the rubber bonded washers. Make sure the tank's spout is facing the inside of the bumper. Add eight 5/16" washers, eight 5/16" lock washers and eight 5/16"-5/8" bolts (must go in this order, four per side, eight total).



Step 3: Slide the Weekender Hitch Mount into your 2" receiver and slide in the hitch pin with the cotter pin clip. Please make sure the valve on the Weekender is on the passenger side for best protection from the elements.



Step 4: Attach your hitch stabilizer by sliding the U-bolt over the Weekender hitch bar.

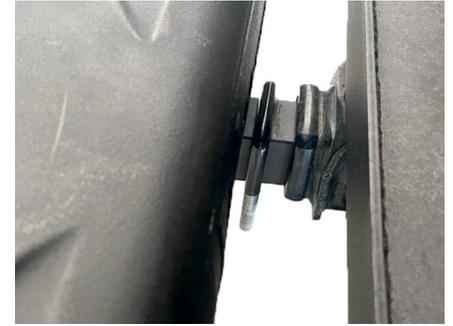

Step 5: Slide on the metal plate with the bend facing the front of your vehicle. Please make sure the bent portion is over the lip of your vehicle's hitch adapter. Once this is in place add the washer, lock washer and nut. Tighten the nut with a wrench until the bolt is securely fastened and there is no movement of your tank.



WaterPORT

Copyright © 2022 WaterPORT. All Rights Reserved.

www.theWaterPORT.com